

REPORT DOCUMENTATION PAGE			Form Approved OMB No. 0704-0188		
<p>Public reporting burden for this collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing this collection of information. Send comments regarding this burden estimate or any other aspect of this collection of information, including suggestions for reducing this burden to Department of Defense, Washington Headquarters Services, Directorate for Information Operations and Reports (0704-0188), 1215 Jefferson Davis Highway, Suite 1204, Arlington, VA 22202-4302. Respondents should be aware that notwithstanding any other provision of law, no person shall be subject to any penalty for failing to comply with a collection of information if it does not display a currently valid OMB control number. PLEASE DO NOT RETURN YOUR FORM TO THE ABOVE ADDRESS.</p>					
1. REPORT DATE (DD-MM-YYYY) July 2012		2. REPORT TYPE Viewgraph		3. DATES COVERED (From - To) July 2012- September 2012	
4. TITLE AND SUBTITLE A Study of Gas-Centered Swirl Coaxial Injectors using X-ray Radiography			5a. CONTRACT NUMBER In-House		
			5b. GRANT NUMBER		
			5c. PROGRAM ELEMENT NUMBER		
6. AUTHOR(S) S. A. Schumaker, A.L. Kastengren, M. D. A. Lightfoot, S.A. Danczyk and C. F. Powell			5d. PROJECT NUMBER		
			5e. TASK NUMBER		
			5f. WORK UNIT NUMBER 50260538		
7. PERFORMING ORGANIZATION NAME(S) AND ADDRESS(ES) Air Force Research Laboratory (AFMC) AFRL/RQRC 10 E. Saturn Blvd. Edwards AFB CA 93524-7680			8. PERFORMING ORGANIZATION REPORT NO.		
9. SPONSORING / MONITORING AGENCY NAME(S) AND ADDRESS(ES) Air Force Research Laboratory (AFMC) AFRL/RQR 5 Pollux Drive Edwards AFB CA 93524-7048			10. SPONSOR/MONITOR'S ACRONYM(S)		
			11. SPONSOR/MONITOR'S REPORT NUMBER(S) AFRL-RQ-ED-VG-2012-259		
12. DISTRIBUTION / AVAILABILITY STATEMENT Distribution A: Approved for Public Release; Distribution Unlimited. PA#12719					
13. SUPPLEMENTARY NOTES Conference paper for the 12th International Conference on Liquid Atomization and Spray Systems, Heidelberg, Germany in 2-6 September 2012.					
14. ABSTRACT Gas-centered swirl coaxial injectors, a specific type of airblast atomizer, are of interest in rocket propulsion applications. These applications require good mixing of the liquid and gas to ensure complete combustion within the engine. While strides are being made on the computational front, predictions of the mass distributions achieved with this type of injector remain too costly or too inaccurate for engineering design. There has been, therefore, a reliance on experimental results. Unfortunately, the mass flow rates and the strong gas phase typically encountered in rocket engines create sprays with high optical densities and render the vast majority of optical and laser techniques ineffective. Data has been obtainable through mechanical patternation, but the technique has limitations. Time-gated ballistic imaging has also shown promise in rocket injectors but produces only qualitative information. An x-ray radiographic technique with a high-brilliance x-ray source (Advanced Photon Source) has been applied to these high-optical-density sprays. To achieve this testing a new, mobile flow facility was constructed; this facility simulates the rocket flows using water and nitrogen instead of fuel and oxidizer. The x-ray radiography technique has been able to measure equilvent path length in gas-centered swirl coaxial injectors at a range of typical operating conditions. These results and their implications for gas- centered swirl coaxial injector performance in liquid rocket engines are discussed.					
15. SUBJECT TERMS					
16. SECURITY CLASSIFICATION OF:			17. LIMITATION OF ABSTRACT	18. NUMBER OF PAGES	19a. NAME OF RESPONSIBLE PERSON Stephen Schumaker
a. REPORT Unclassified	b. ABSTRACT Unclassified	c. THIS PAGE Unclassified			19b. TELEPHONE NO (include area code) 661-275-5165



A Study of Gas-Centered Swirl Coaxial Injectors Using X-ray Radiography

S. Alexander Schumaker¹, Alan L. Kastengren²,
Stephen A. Danczyk¹, Malissa D.A. Lightfoot¹,
& Chris F. Powell²



¹Air Force Research Laboratory, Edwards AFB, CA, USA
²Argonne National Laboratory, Argonne, IL, USA

DISTRIBUTION A: Approved for public release; distribution unlimited. Clearance #



Motivation


- **Quantitative spray data is lacking for liquid-gas rocket injectors, especially in the near-injector region**
 - Quantitative data needed to develop scaling laws and validate models
 - Near-injector region is of critical importance since this is typically where combustion occurs
- **Most liquid rocket injectors operate at conditions (high flow rates and high pressures) which produce optically dense sprays**
 - Laser light is multiply scattered and insufficient useable light exits the spray to allow the use of laser diagnostics in the near-injector region
 - Other measurement techniques can be invasive, qualitative or provide only generalized time-averaged information
 - Examples include mechanical patternation, ballistic imaging and traditional shadowgraphy
- **X-ray radiography is currently the only technique that allows quantitative results for mass distribution in the near-injector region and inside of the injector itself**




Other Techniques



- **Ballistic Imaging** can provide quantitative information on the size and shape of intact structures but ignores the droplet field

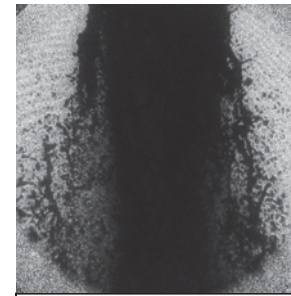


Shadowgraphy

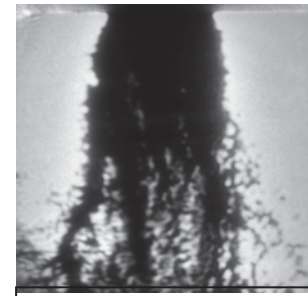


Ballistic Image

- **PDPA** can be used on these sprays but typically not in the near injector region

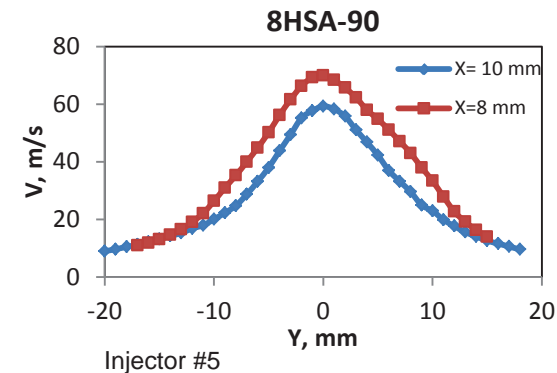

- **Mechanical Pattenization** is the only technique that can directly measure mass distribution but again not in the near injector region

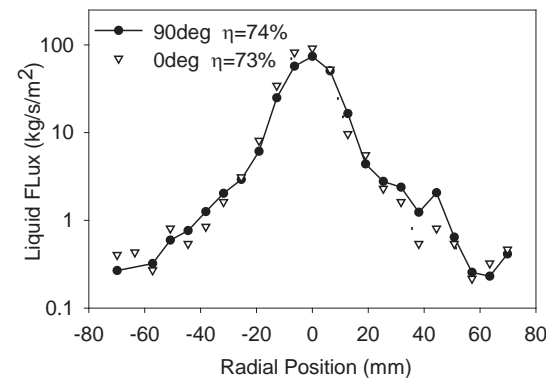



Previous X-ray Radiography Studies



- **To date most of the x-ray radiography studies have focused on diesel and gasoline injectors**
 - Leick, P., Kastengren, A.L., Liu, Z., Wang, J., & Powell, C.F., *11th Triennial International Conference on Liquid Atomization and Spray Systems*, Vail, Colorado, July 2009
 - Kastengren, A. L., Powell, C. F., Liu, Z., Moon, S., Gao, J., Zhang, X., and Wang, J., *22nd Annual Conference on Liquid Atomization and Spray Systems*, Cincinnati, Ohio, May 2010
- **Other studies include:**
 - **Aerated-liquid jets**
 - Lin, K.C., Carter, C., Smith, S., and Kastengren, A., *50th AIAA Aerospace Sciences Meeting*, Nashville, Tennessee, January 2012.
 - **Impinging jet injectors**
 - Halls, B. R., Heindel, T.J., Meyer, T.R., and Kastengren, A.L., *50th AIAA Aerospace Sciences Meeting*, Nashville, Tennessee, January 2012.
 - **Swirl-coaxial injector**
 - Eberhart, C. J., Lineberry, D. M., Frederick, R. A., and Kastengren, A. L., *48th AIAA Joint Propulsion Conference*, Atlanta, Georgia, August 2012.
- **First time used in a spray with a strong gas phase**



Gas-Centered Swirl Coaxial Injectors





- **Why Gas-Centered Swirl-Coaxial (GCSC) injectors?**
 - Interest exists around the world in designing new LOX-Hydrocarbon rocket engines using an OX-rich staged-combustion cycle.
 - Recent papers from Russia, China, South Korea and multiple US groups
 - Successfully used in Russian rocket engines employing a staged-combustion cycle (e.g., RD-170)
 - Such a design and typical mixture ratios result in a high speed gas flow which is available to atomize the liquid hydrocarbon fuel
- **Design criteria and scaling laws are needed over a range of conditions and geometries**
- **Previous work by the authors using cold flow techniques have investigated the effect of numerous geometric variations on the size, shape, and frequency of the wall bounded film and spray**
 - Geometric variations include cup radius, step thickness, gas radius at end of sheltered lip, initial film thickness, cup length and swirl
 - Injector-wall and injector-injector interactions have also been explored
- **Cold flow techniques include laser sheet imaging of the film, shadowgraphy of the spray, limited PDPA**




Gas-Centered Swirl Coaxial Injector



- Tangential liquid inlets create a swirling, annular fluid which is atomized by high-velocity unswirled gas
- Momentum flux ratio (the main scaling parameter) was varied between 60 and 145 with 4 different geometries
 - Geometries represent changing the number of inlets, the inlet size and the inlet area (swirl number)
 - Outlet size also examined, but not presented today

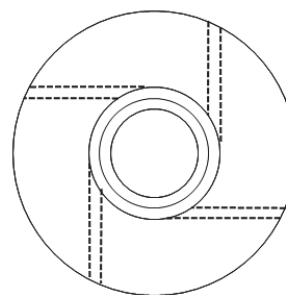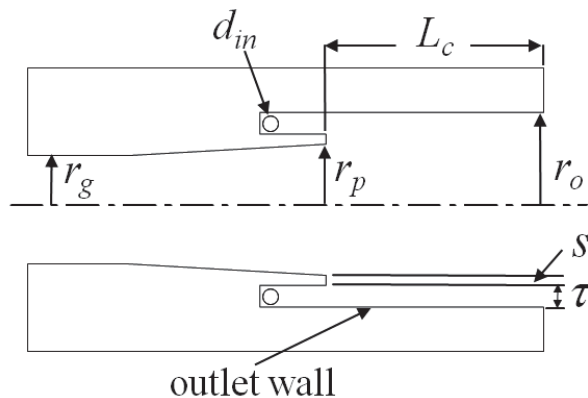

4 tangential inlets

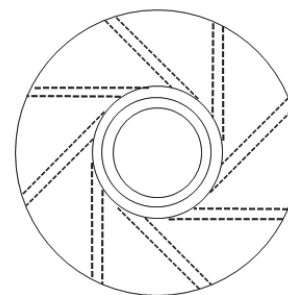

8 tangential inlets


$r_g = r_p = 6.35$ mm
 $L_c = 33.0$ mm
 $r_o = 9.53$ mm
 $S = 1.52$ mm
 $\tau = 1.65$ mm
 $d_{in} = 1.6$ mm, 4H
 $= 1.6$ mm, 8HDA
 $= 0.989$ mm, 8HSA



Nondimensional Parameters



- The relevant nondimensional parameters can be obtained by nondimensionalizing the force balance for a surface disturbance by the liquid inertia ($\rho_l v_l^2 \tau^2$) and multiplying by τ^2/A_{dist} to eliminate disturbance parameters from the aerodynamic force term
- Assuming worst case scenario for disturbance size and that all constants are of order 1:

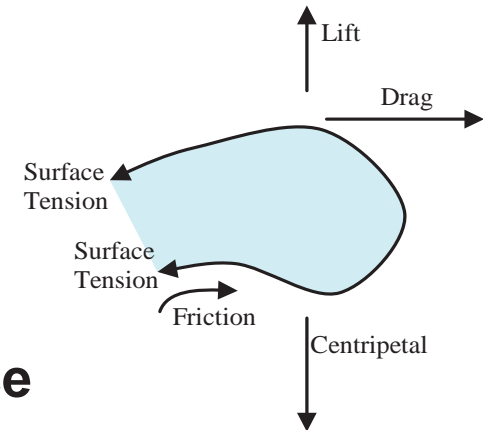

Aerodynamic		Viscous		Centripetal		Surface Tension
$\Phi = \frac{\rho_g v_g^2}{\rho_l v_l^2}$		$\frac{1}{Re_l} \frac{v_g}{v_l}$		$Fr_c = \left(\frac{v_{Tan}}{v_{Total}} \right)^2 \left(\frac{\tau}{r_o} \right)$		$\frac{1}{We}$

Example with the 8H-ONPNTN Geometry:


Force	Aerodynamic Φ_{total}	Liquid Phase Viscous	Centripetal Fr_c	Surface Tension
Value	114	0.1	0.2	0.02

- GCSC injectors operate in a regime where aerodynamic forces are dominant



Momentum Flux Ratio

$$\Phi_{Total} = \frac{\rho_g v_g^2}{\rho_l v_l^2}$$

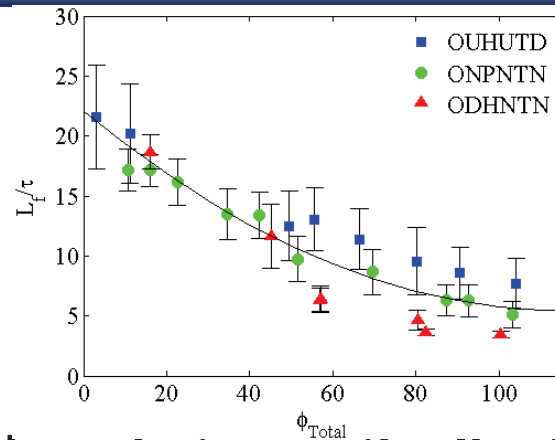

Name	r_o (mm)	τ (mm)	r_p (mm)	s (mm)
ODHNTN	7.62	1.65	4.45	1.52
ONPNTN	9.53	1.65	6.35	1.52
OUHUTD	11.4	1.32	7.24	2.87

- Swirl alters the shear between the liquid and gas phase which must be taken into account in Φ
- Difficult to define due to complex compressible flow field
- Use of single velocity to describe flow field questionable
- Best collapse of film lengths found using total liquid velocity and a calculated gas phase velocity and static density
- Total liquid velocity calculated using measured mass flow rate and assuming conservation of momentum between the tangential liquid injector holes and liquid cup exit
- Using the measured mass flow rate, total temperature and static pressure in the gas plenum static density was calculated assuming 1D flow and a calorically perfect gas



Mobile Flow Laboratory



- **Self contained mobile system capable of delivering up to one kg/s of H_2O & GN_2 at pressures in excess of 200 atm**
 - Requires only power, LN_2 , and exhaust from host facility.
 - System fully rated to 408 atm (Allows more GN_2 storage)
 - Dedicated Allen-Bradley control & Pacific Instruments data acquisition systems
 - Fully remote operation
 - High speed abort system on all data channels for added pressure safety
 - System is on wheels and can be assembled in under 2 days
 - Ran almost continuously (24 hours/day) for two weeks



Distribution A: Approved for public release; distribution unlimited.




X-Ray Radiography Details

- **Experiments performed at the 7-BM beamline of the Advanced Photon Source**
- **Synchrotron bending magnet to produce polychromatic (white beam) which is made into a monochromatic beam**
 - Monochromator is tunable between 5.1 keV to 12 keV
 - 10 keV used for the present study based on the absorption of the anticipated test conditions
 - Beam is small and has a FWHM of 5 x 6 microns
 - X-ray flux of 2.5×10^{11} photons/s/mm²
- **Both time-averaged and time-resolved measurements can be made**
 - The system was not optimized for time-resolved measurements as only time-averaged ones were originally planned.
- **Beer's law is used to convert these measurements into an equivalent path length of water (EPL)**
 - Path length is the average across each measurement, 4 seconds for time averaged results and 1 microsecond for time-resolved.




Test Setup & Matrix

- Normalization by the the intensity of incident light performed in two steps
 - Titanium foil: beam intensity variations during a scan
 - Zero absorption case: average signal level from the 5 points in the scan with the highest transmission (Outside the spray-accounts for gas absorption)

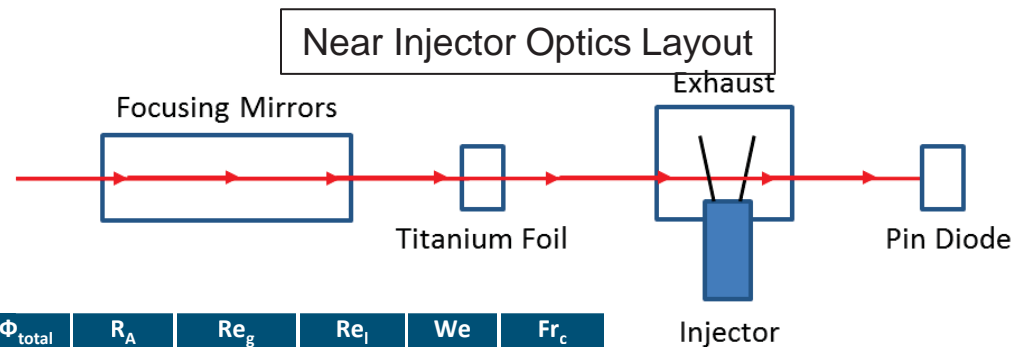



Condition	\dot{m}_g (g/s)	\dot{m}_l (g/s)	Φ_{total}	R_A	Re_g	Re_l	We	Fr_c
4H-60	46	37	58	0.299	380,000	2,100	42	0.158
4H-90	46	30	86	0.299	380,000	1,800	29	0.158
4H-120	46	26	117	0.299	380,000	1,500	21	0.158
4H-145	46	23	141	0.299	380,000	1,400	17	0.158
8HSA-60	46	32	58	0.261	380,000	2,200	42	0.162
8HSA-90	46	26	89	0.261	380,000	1,800	28	0.162
8HSA-110	54	26	107	0.261	440,000	1,800	28	0.162
8HSA-120	46	22	120	0.261	380,000	1,600	20	0.162
8HDA-60	46	49	60	0.406	380,000	2,100	41	0.145
8HDA-90	46	40	91	0.406	380,000	1,700	27	0.145
8HDA-120	46	35	118	0.406	370,000	1,600	21	0.145
8HDA-130	33	26	128	0.406	260,000	1,100	12	0.145
8HDA-145	46	31	148	0.406	380,000	1,364	17	0.145

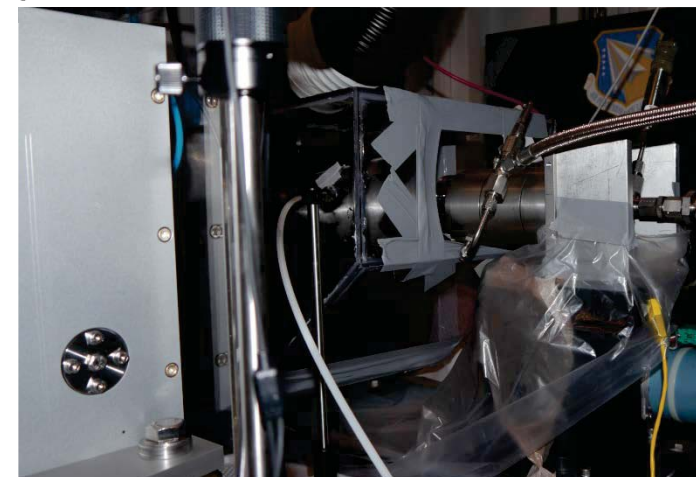



Equivalent Pathlength




- EPL is the pathlength-integral of the amount of water in the beam
- EPL is a function of velocity, droplet size and mass flux distribution
- Simulations of EPL were run to understand the effect of the velocity and mass distribution on the EPL profile
 - Simulation assumes axisymmetric mass & velocity profiles & divides the spray into a grid
 - Droplet size is assumed uniform across the spray
 - Vertical spacing between droplets in each cell is set to achieve correct mass flux and velocity

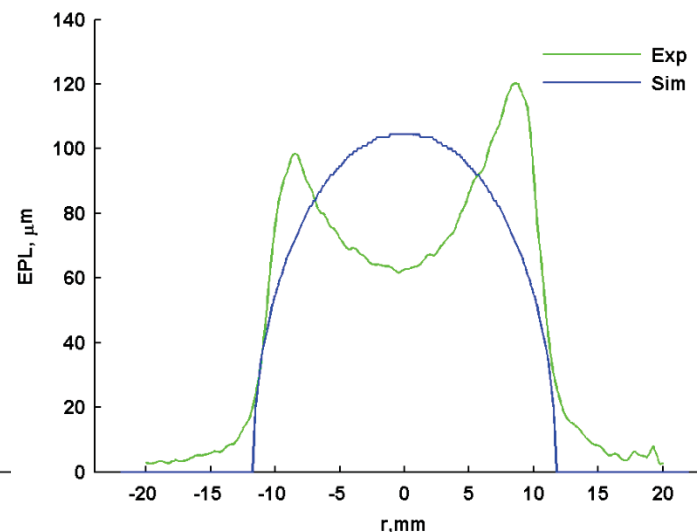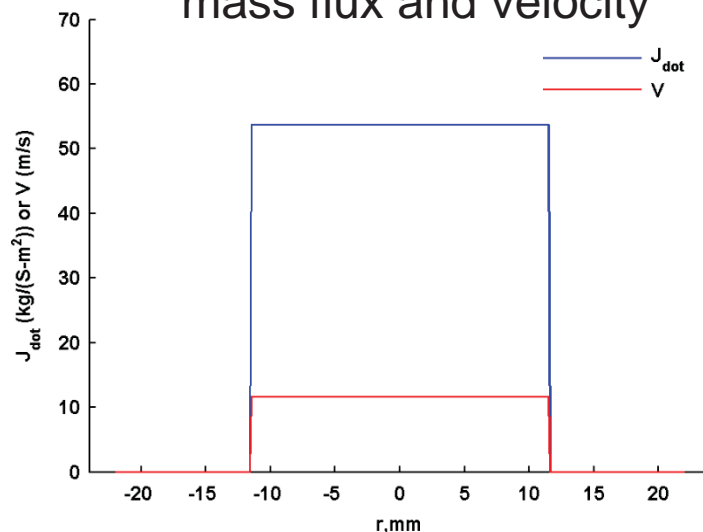

8HSA-120
(5mm Downstream)
 $D_d = 75 \mu\text{m}$
 $\dot{m}_L = 35 \text{ g/s}$
 $V_{\text{ma}} = 11.6 \text{ m/s}$




EPL Simulation

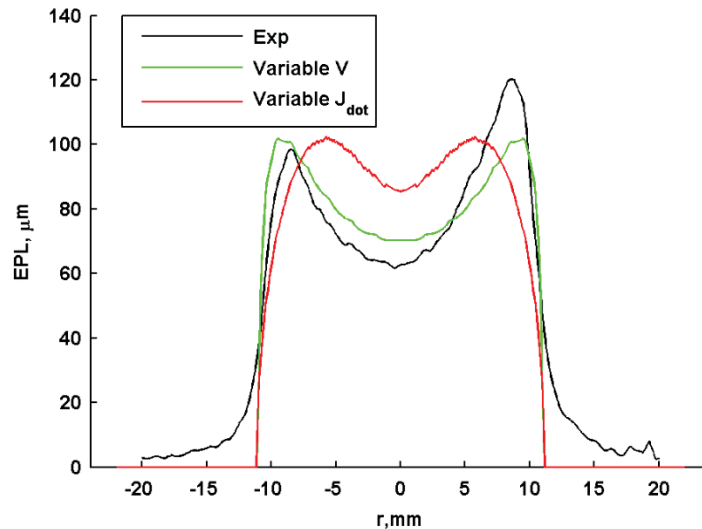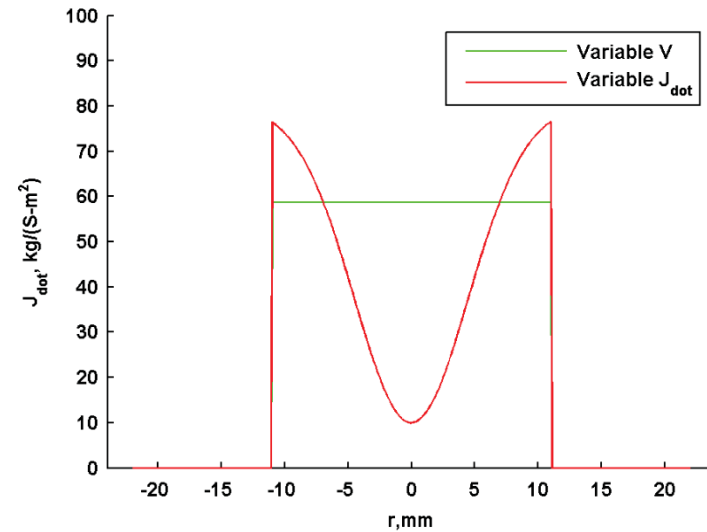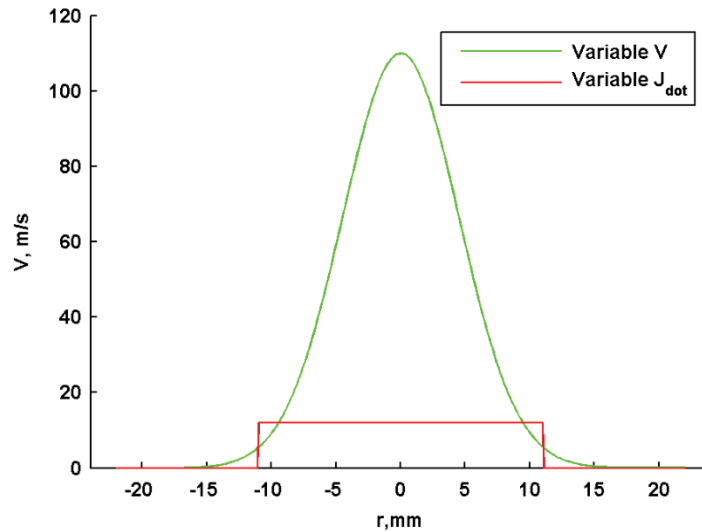


- The center valley in EPL can not be explained by a mass deficit alone
- The EPL deficient in the spray center is largely caused by high center line gas post velocity
 - 300 m/s gas velocity at gas post exit
 - Droplet diameter (D_d) assumed 50 μm for both Cases




Average EPL Profiles

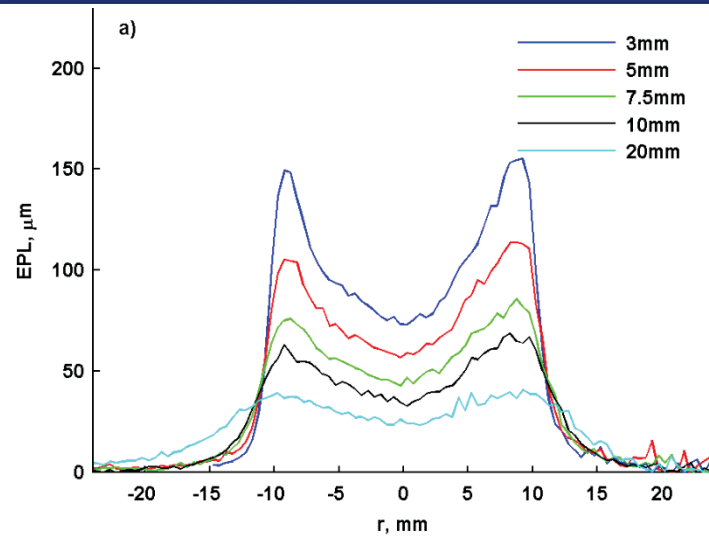


8HSA-120

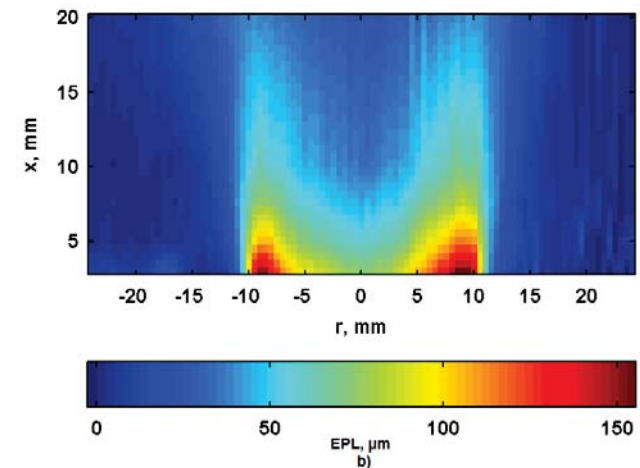


8HSA-120

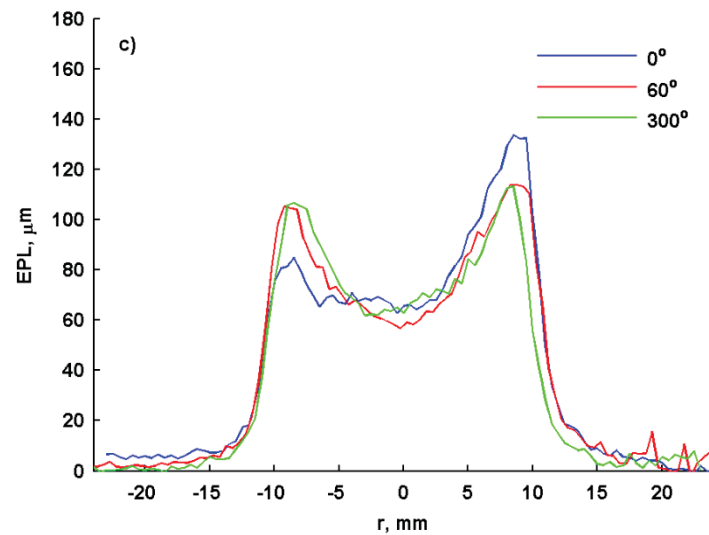

8HSA-120

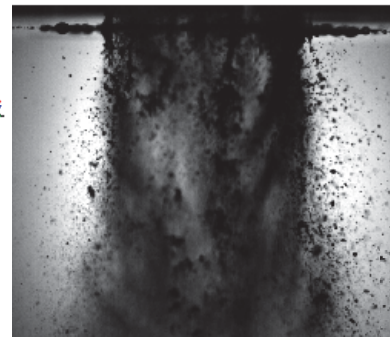

8HSA-120


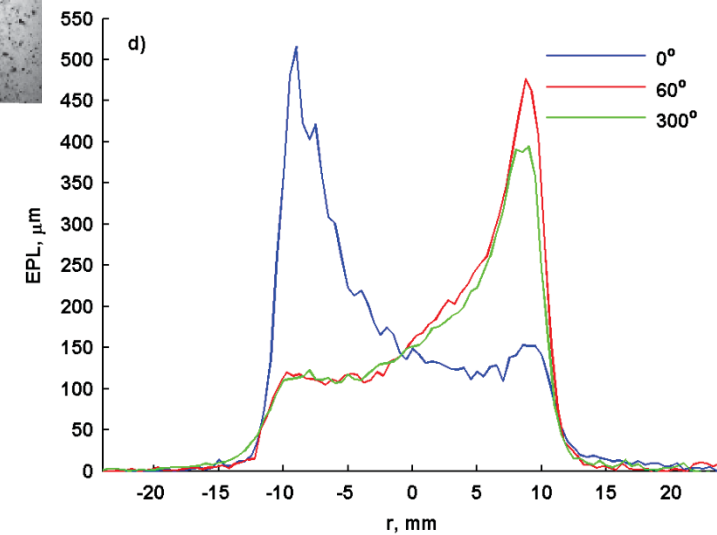


4HSA-60



Mass Weighted Velocity


- **Droplets across the entire spray are undergoing acceleration in the near injector region**
 - Acceleration can be quantified by the mass-weighted velocity (V_{ma})
 - V_{ma} obtained by dividing \dot{m}_L with the integral of the average projected liquid density profile
 - Between initial gas-liquid contact and 3 mm downstream acceleration is on the order of $1,000 \text{ m/s}^2$
 - Between 3 mm and 10 mm acceleration is on the order of $10,000 \text{ m/s}^2$

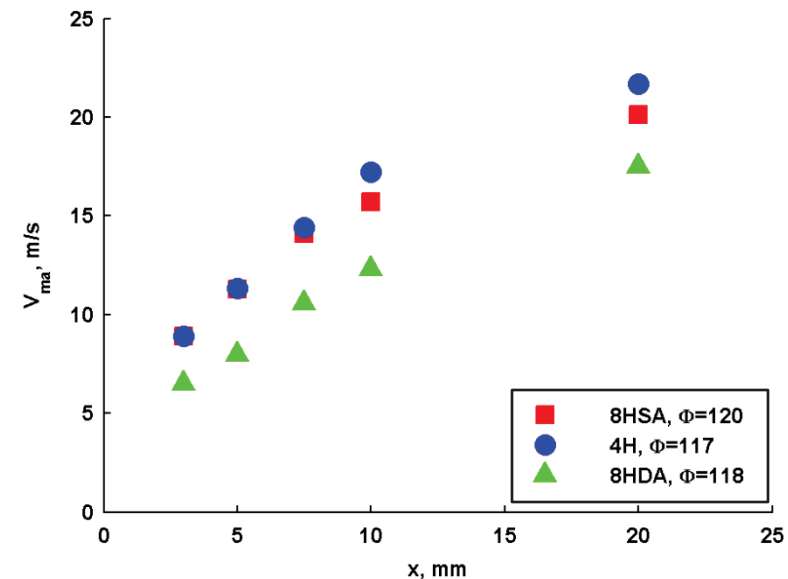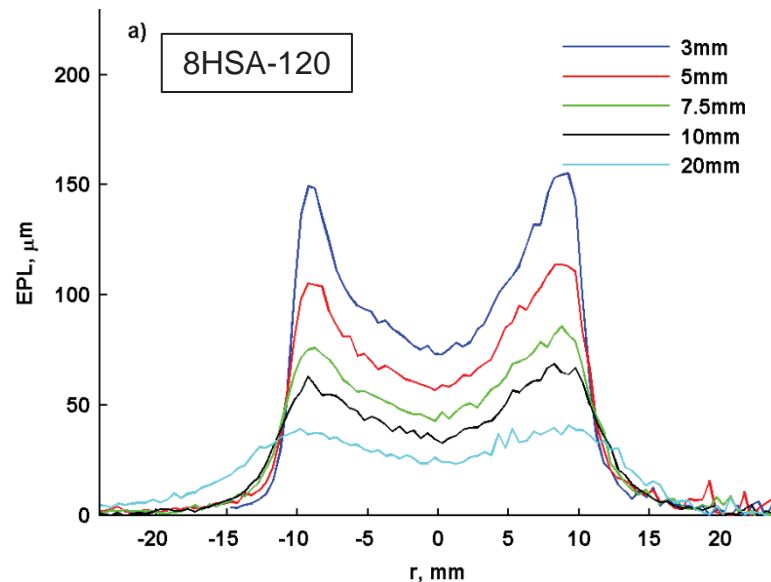



180° Radial Profiles

- Due to space constraints at beamline, testing was conducted with the spray flowing horizontal
- Two scans with 180° rotation to investigate potential gravity effects
 - 180° flipped about $r=0$ for comparison

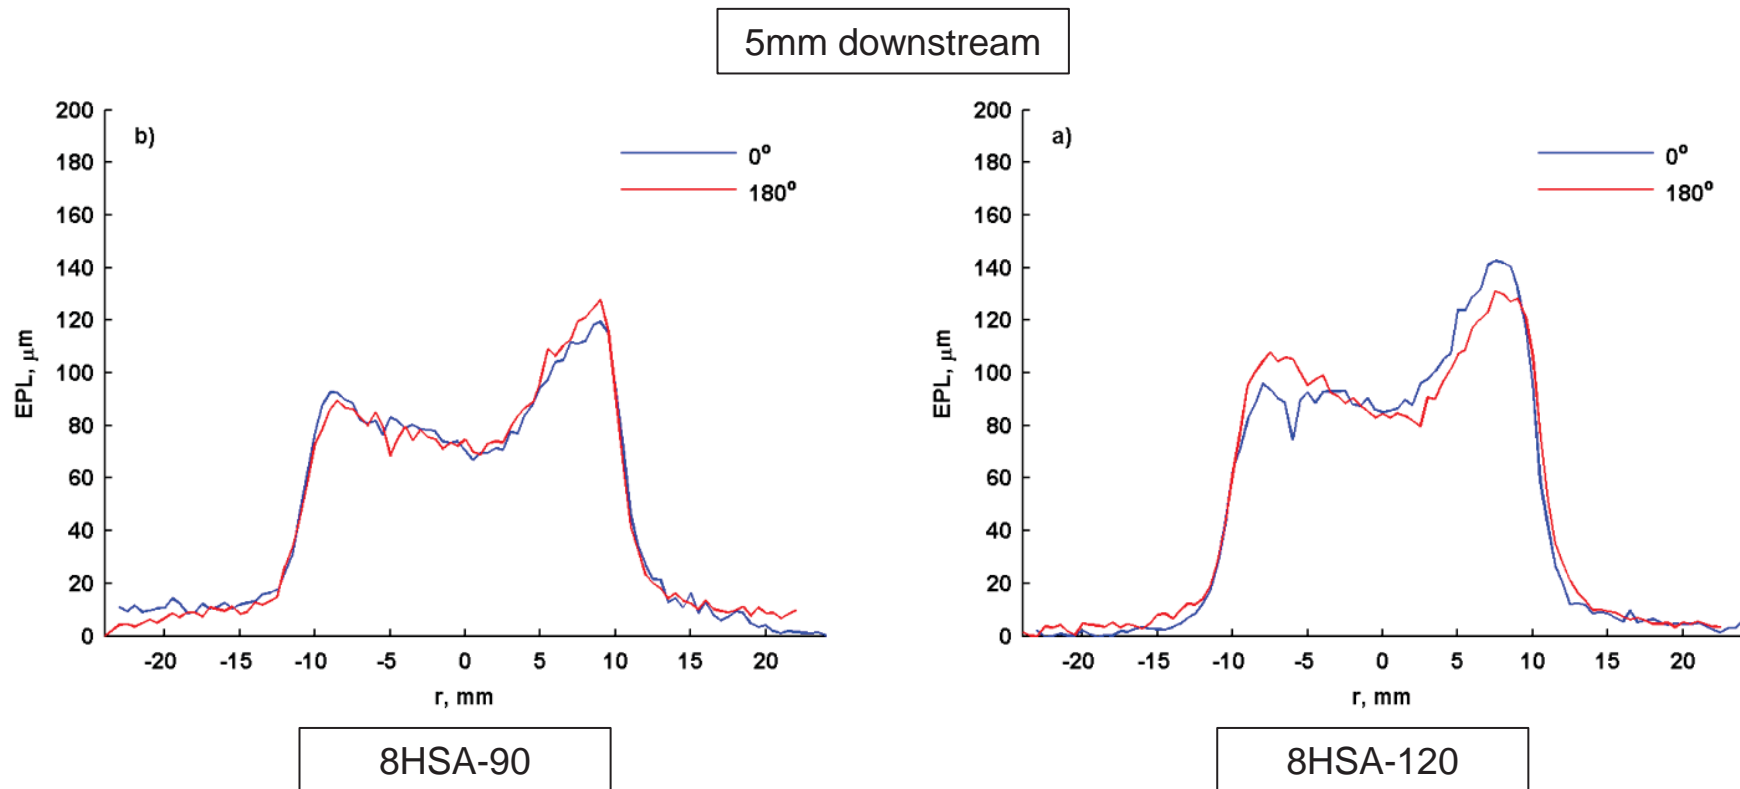





Momentum Flux

- **Uniformity improves with increasing momentum flux ratio (Φ) up to a point**
 - Decrease in EPL profile as Φ increases is due to the decrease in the liquid mass flow rate
 - Expected from earlier work / views downstream

4H-ONPNTN, 5mm downstream

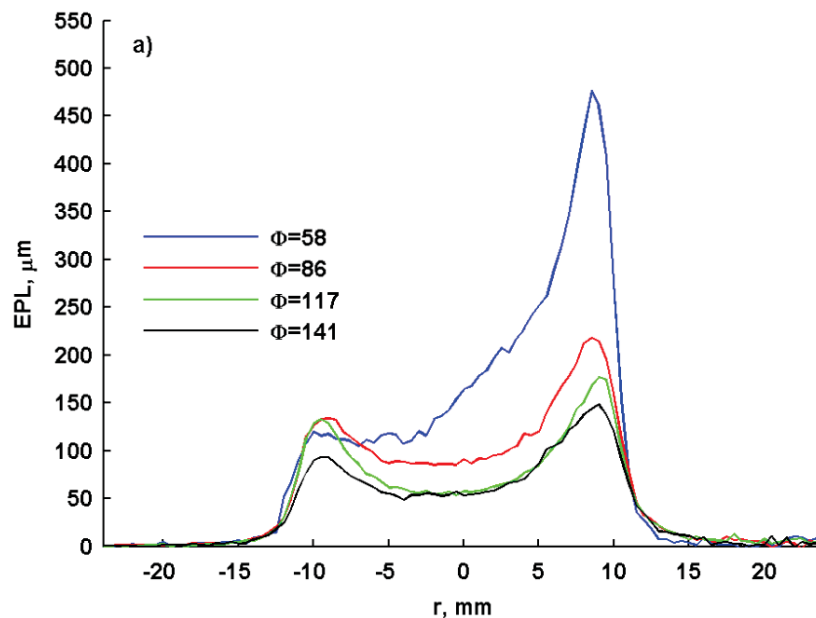



60° orientation

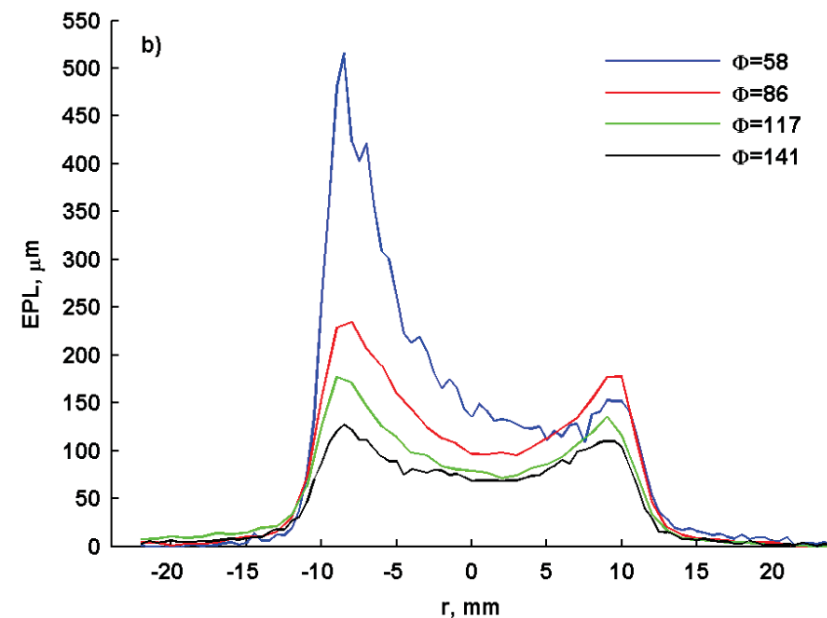

0° orientation



Swirl

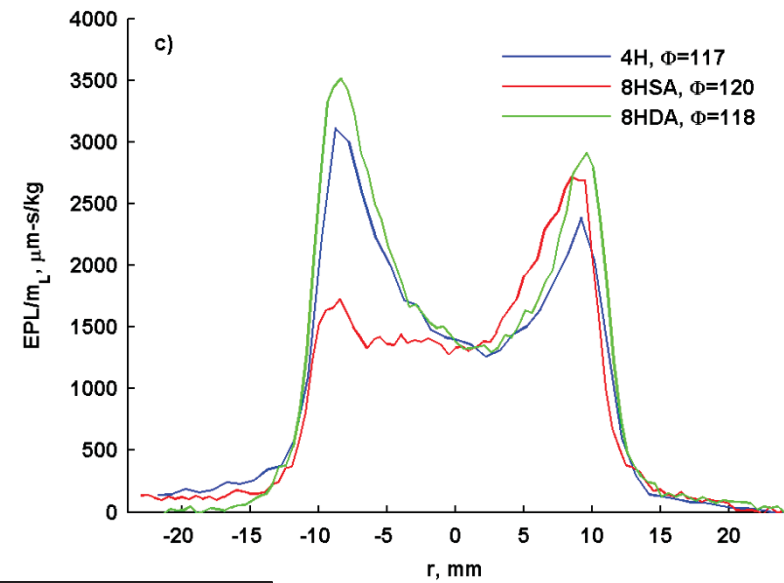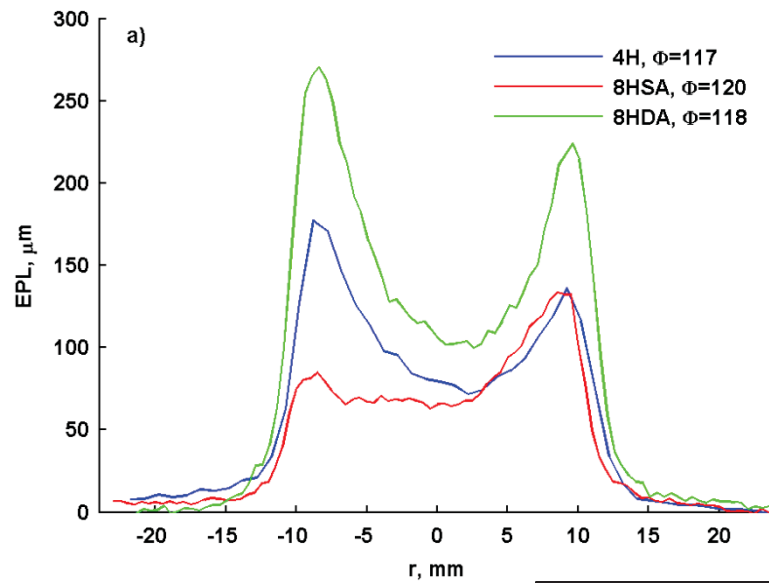

0° orientation, 5 mm downstream



$R_A=0.299$, 4H-120



$R_A=0.261$, 8HSA-120

$R_A=0.406$, 8HDA-120


Distribution A: Approved for public release; distribution unlimited.



Spray Symmetry & \dot{m}_L

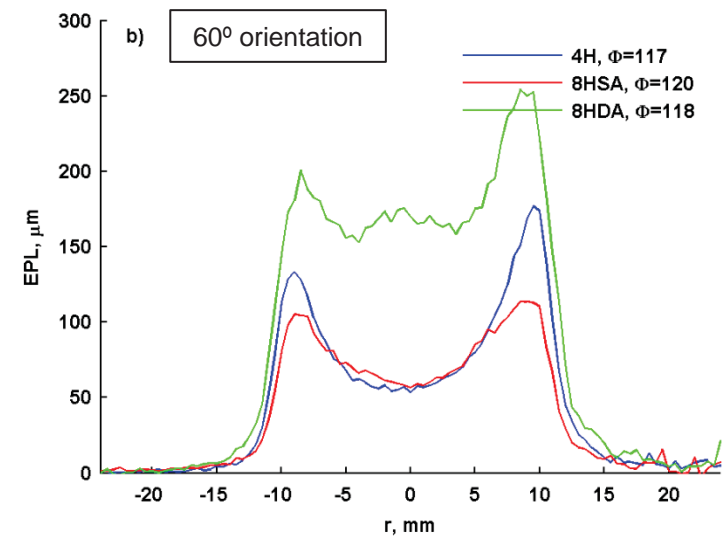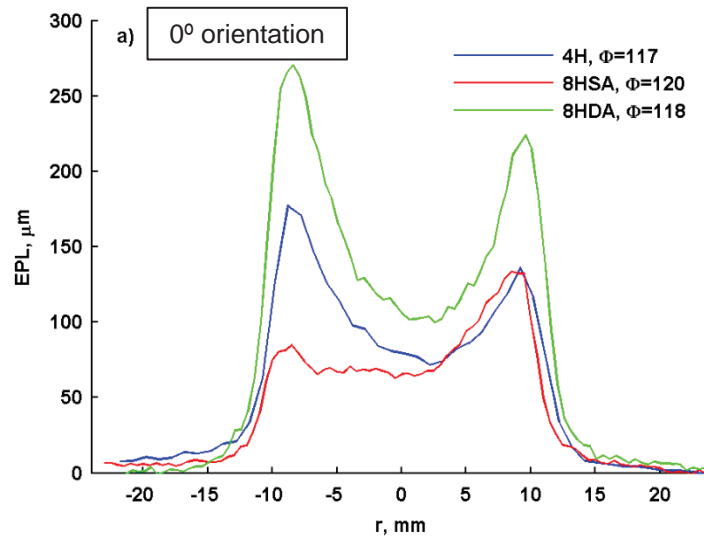

5mm downstream

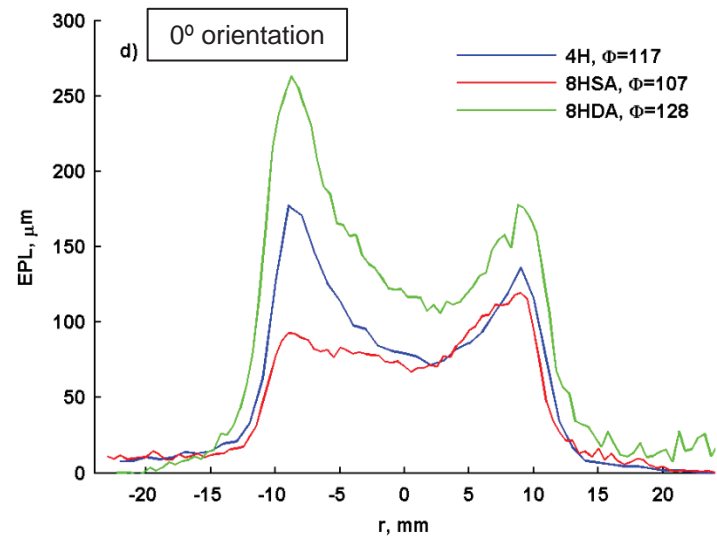



$\dot{m}_L=26 \text{ g/s}$
4H, $V_{gp}=295 \text{ m/s}$
8HSA, $V_{gp}=309 \text{ m/s}$
8HDA, $V_{gp}=250 \text{ m/s}$



Time Resolved: A Single Droplet



- **Can the x-ray radiography provide spray statistics?**
 - Prior radiography results have not extracted droplet information
- **Consider the simplest case of a single droplet moving thru the beam**
 - The peak of the path length corresponds to the droplet diameter
 - The elapsed time of departure from 0 path length relates to the velocity
- **A simple approach is taken to get droplet size and velocity from the data even where multiple droplets are in the beam**
 - Each peak in the data is a droplet
 - Its diameter is the offset from the bounding valleys (minimum)
 - Its velocity is related to the time between bounding valleys
 - This produces known biases, but demonstrates power of measurement


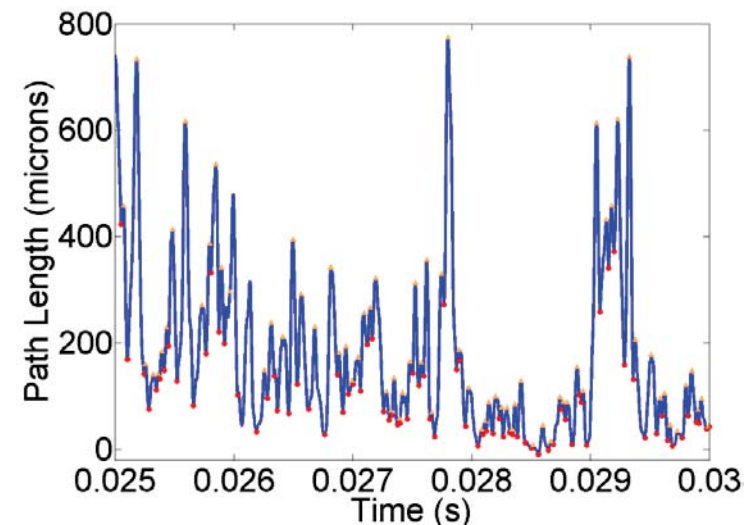
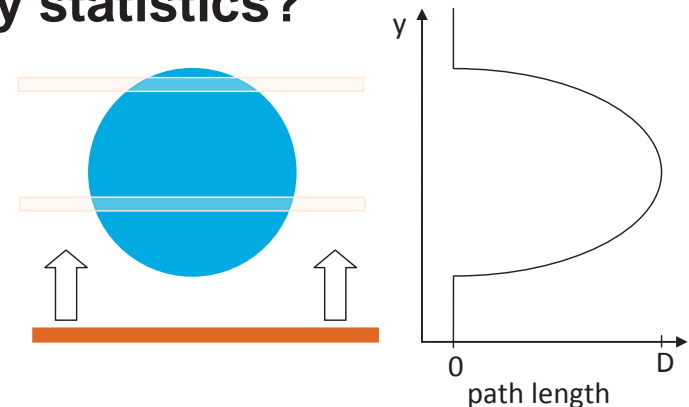




Improving Injector Understanding



- **Even with multiple droplets in the beam, sizes and velocities can be extracted**
 - There are known biases in the technique and they have been investigated and an improved methods is in the works
- **While these biases mean that the current assessments are only semi-quantitative, some useful results exist**
 - Droplet distributions appear to be log-normal which is somewhat unexpected and likely a result of noise level in the data and biasing
 - Changing the liquid inlet size has little or no effect on the atomization and droplet-size distribution
 - However, changing the liquid inlet area (swirl) has a large effect on droplet-size distribution

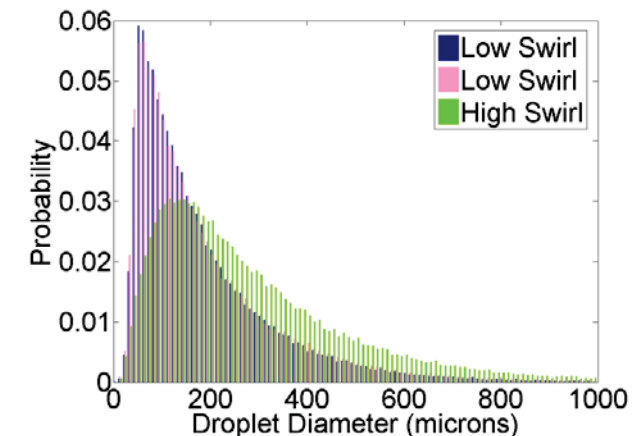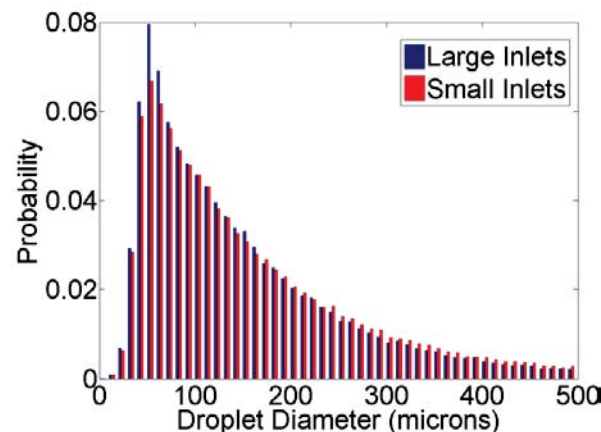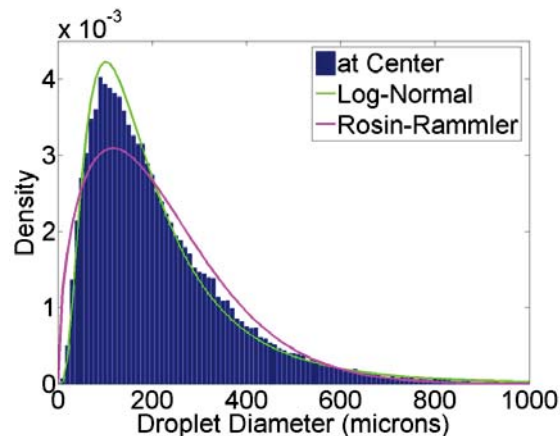



X-Ray Conclusions

- **X-ray radiography was used to quantitatively examine the near injector region of GCSC injectors**
- **Time-averaged measurements quantified a significant level of asymmetry not previously observed in these sprays**
 - However, the mass and velocity remain coupled and interpretation can be a challenge
 - Indicates that engines using GCSC injectors must be able to tolerate some level of asymmetry
- **EPL deficits in the spray center were shown to be caused by high velocities in the middle of the spray**
- **Mass averaged velocities show high acceleration in the near injector region as far as 20 mm downstream**
- **Spray width is unaffected by Φ but does decrease with increasing swirl level**
- **Time-resolved radiography might be able to help decouple mass & velocity by providing droplet size and velocity distributions**
 - A simple approach demonstrates the utility of the technique
 - Improvements have been identified and implemented for future testing to improve fidelity
- **X-ray radiography is enabling spray insight not achievable with other available diagnostics**



Acknowledgements

- A portion of this research was performed at the 7-BM beamline of the Advanced Photon Source, Argonne National Laboratory. Use of the Advanced Photon Source at Argonne National Laboratory was supported by the U. S. Department of Energy, Office of Science, Office of Basic Energy Sciences, under Contract No. DE-AC02-06CH11357.
- Special thanks for their assistance in setting up and data collection during the testing campaign at Argonne National Laboratory
 - Benjamin Halls (Iowa State University)
 - Chad Eberhart (The University of Alabama in Huntsville)
 - William Miller (Kettering University)



7-BM



Back Ups






Time Resolved: A Single Droplet





- **Can the x-ray radiography provide spray statistics?**
 - No spray statistics possible in near injector region with conventional diagnostics and these dense sprays
 - Prior radiography results have not extracted droplet information
- **Consider the simplest case of a single droplet moving thru the beam**
 - The peak of the path length corresponds to the droplet diameter
 - The elapsed time of departure from 0 path length relates to the velocity
- **A simple approach is taken to get droplet size and velocity from the data even where multiple droplets are in the beam**
 - Each peak in the data is a droplet
 - Its diameter is the offset from the bounding valleys (minimum)
 - Its velocity is related to the time between bounding valleys
 - This produces known biases, but demonstrates power of measurement

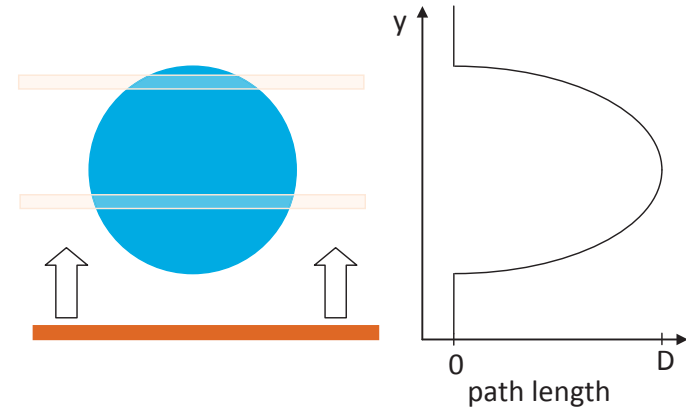



Droplet Statistics

- Multiple droplets are in the beam at any given time
- Even so, droplet sizes and velocities can be extracted
 - There are known biases in the technique and they have been investigated
 - An improved technique using curve-fitting is in the works
- Droplet distributions currently appear to be log-normal which is unexpected and likely a result of noise level in the data and some biasing
- Velocities are a Log-Normal distribution, but this is more typical

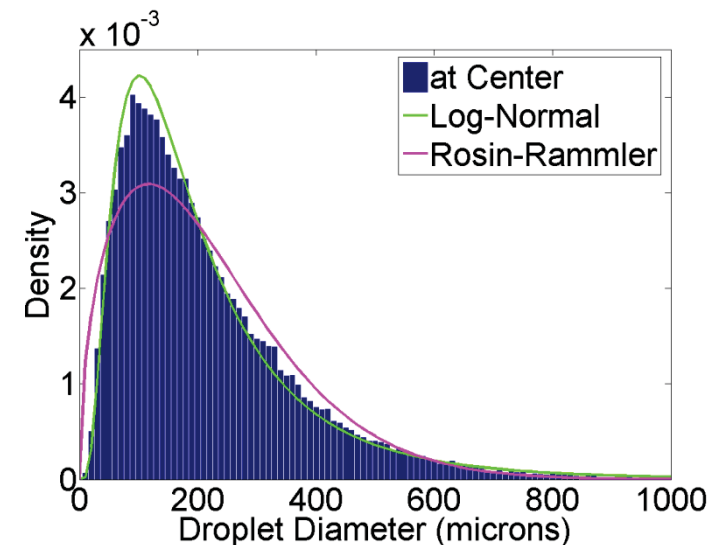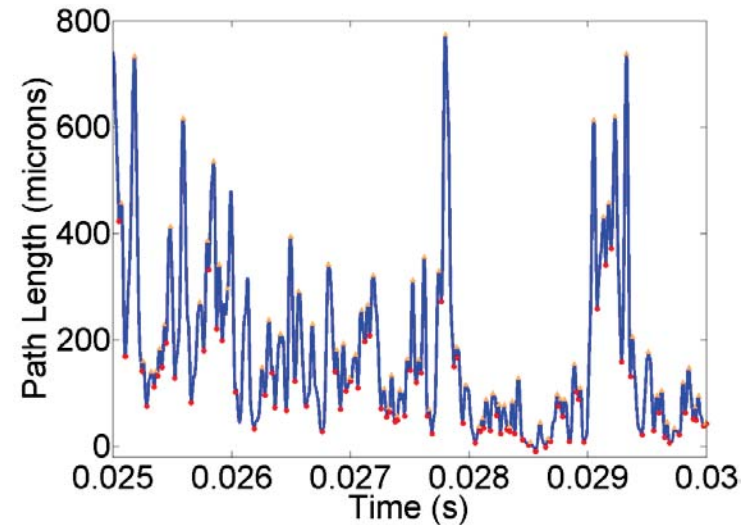




Comparison to Time-Averaged



- **Time-averaged results can be related to droplet diameters extracted from time-resolved data**
 - Correlation is not exact because periods of no droplets are included in the time-averaging
 - For a single droplet, the mean path length would be $\pi D/4$
- **Mean diameter is LARGER which indicates it is being overestimated by the simple procedure**

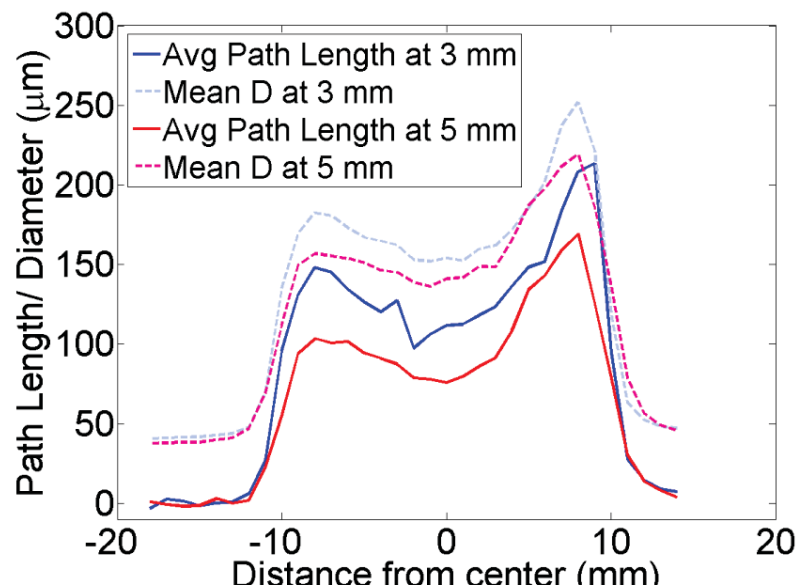



- Could be a result of upward diameter bias
- Most likely the result of not measuring very small droplets (noise and resolution)
- Both will be improved upon with the new DAQ at APS and new data processing here at AFRL



Velocity as a Function of Diameter



- There is a strong correlation between droplet diameter and velocity in these results
- At least some of this is artificial and a result of the current experimental set-up
 - Velocity as a function of diameter does not change with axial (downstream) distance
 - Larger droplets are faster and have a wider range of velocities, which is not what would be expected for a shear-driven spray
 - Happens because droplets must be in beam 10 microseconds to be measured as an independent droplet in the current simple assessment

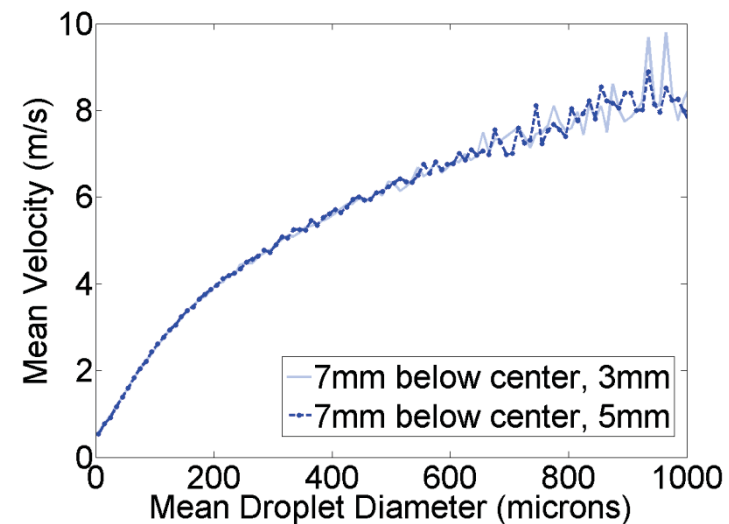
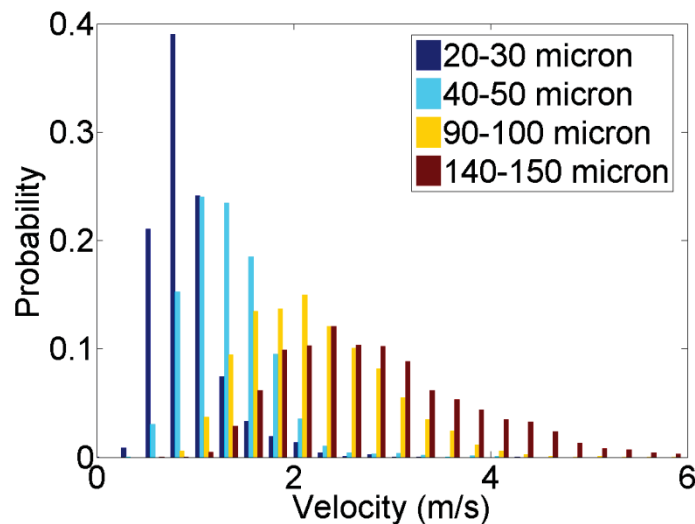




Improving Injector Understanding




- While biases mean that the current assessments are only semi-quantitative, some useful results exist
- Changing the liquid inlet size has little or no effect on the atomization and droplet-size distribution
- However, changing the liquid inlet area (swirl) has a large effect on droplet-size distribution

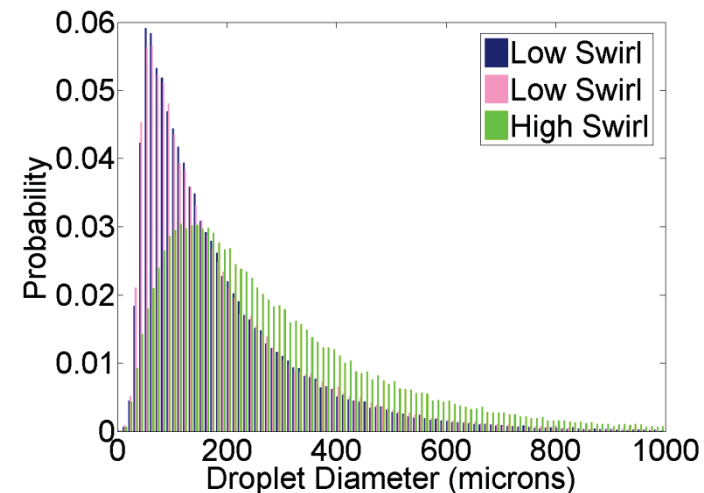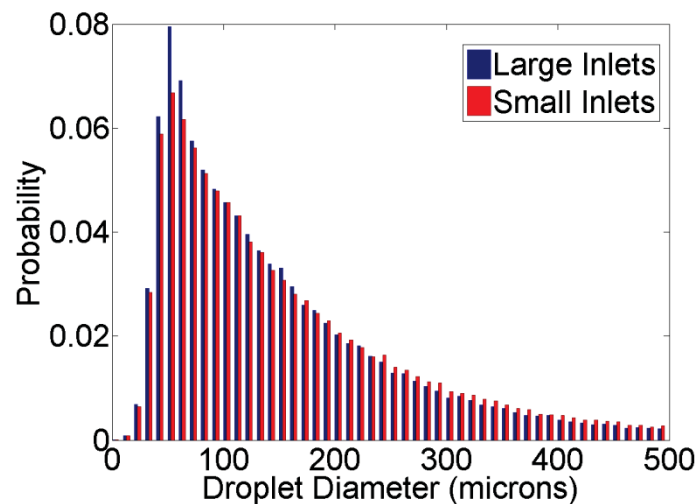



Simple Procedure

- **Automated Matlab process was developed to find peaks and troughs and translates them to droplet diameter and velocity**
- **Other assumptions include**
 - Droplets are spherical and travel so that their centers are captured by the beam
 - Droplets have only axial velocities
- **Signal-to-noise ratio not optimized here, so a running-average is taken to smooth data**
 - Lower x-ray energy will be used in the future to improve the signal-to-noise and hopefully remove the need for filtering


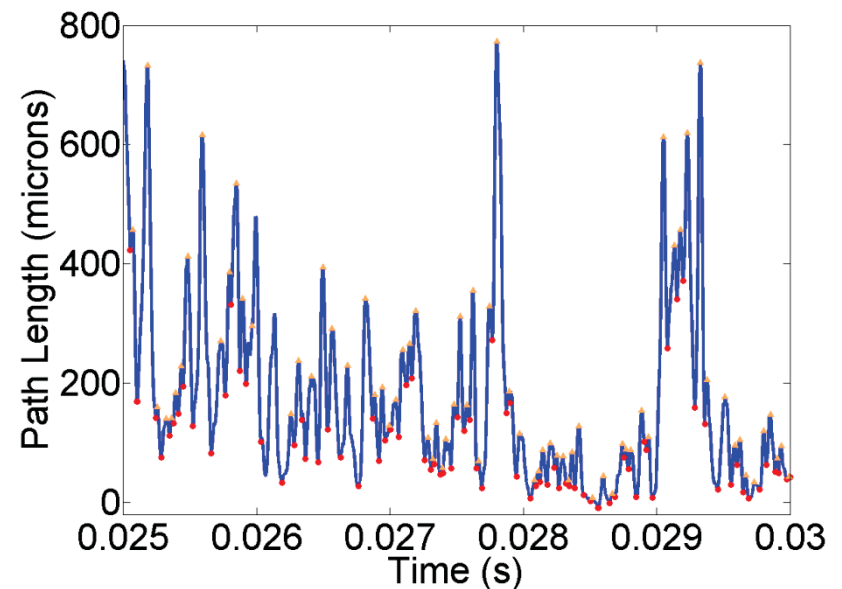




Biases



- **Obviously, there are multiple droplets in the beam at one time (troughs are not 0), so simple procedure introduces biases**

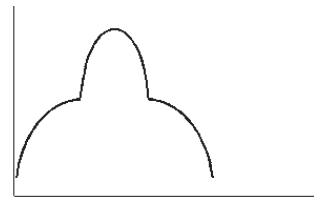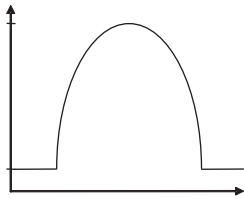

- If 2 droplets are same velocity and size and enter simultaneously, the procedure finds 1 droplet of double size and velocity
- If 2 droplets are the same but entry is offset then an “extra” droplet is found and there is a bias to underestimate diameter
- If 2 droplets are same size and entry time but different speeds then the faster droplet appears too large and fast and the slower droplet has an overestimated velocity



- **Improvements could be made using a curve-fitting procedure similar to in spectroscopy**

- However, this is complex and time consuming (therefore, it is currently incomplete)





Noise Level

- The automated procedure finds “droplets” in the case where no water is flowing
 - Mean diameter is 23 microns and 95th percentile diameter is 35 microns
- Droplets are also found outside of the main spray
 - Spray edge is difficult to determine precisely
 - These values are larger than with no water, 95th percentile is 44-60 microns depending on the test
 - Mist does recirculate in the exhaust area; this can be mollified by improved exhaust

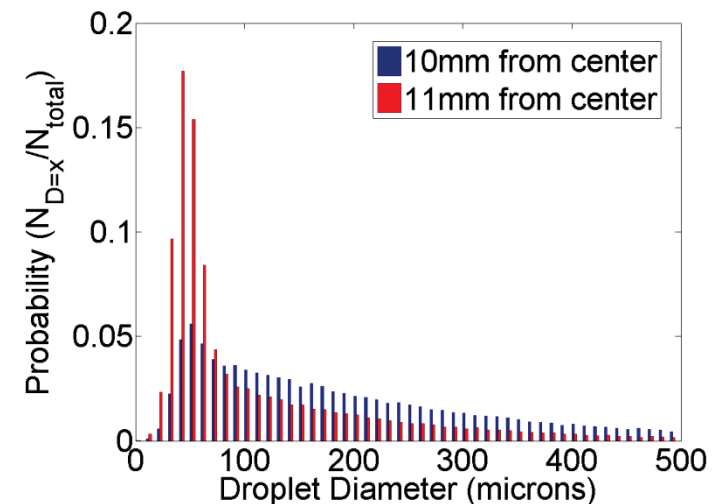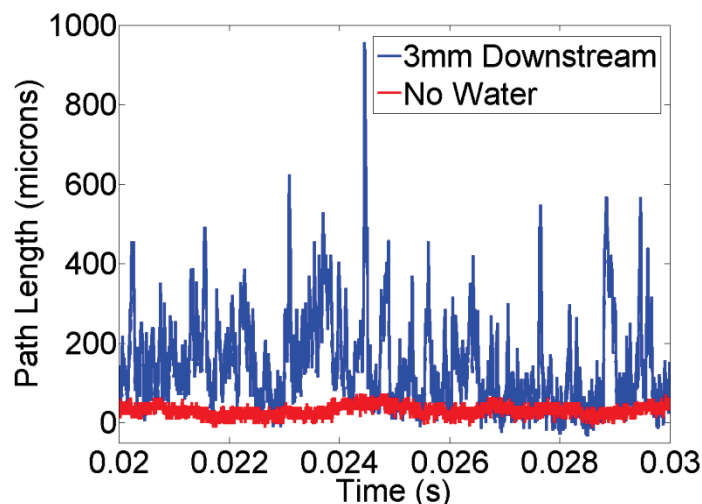



Inlet Size

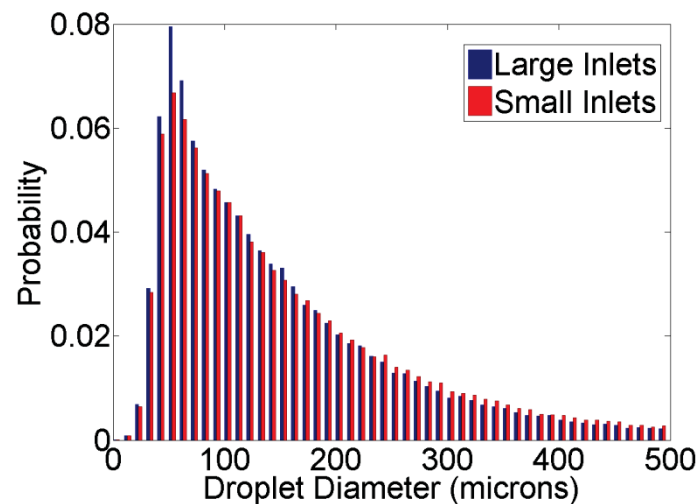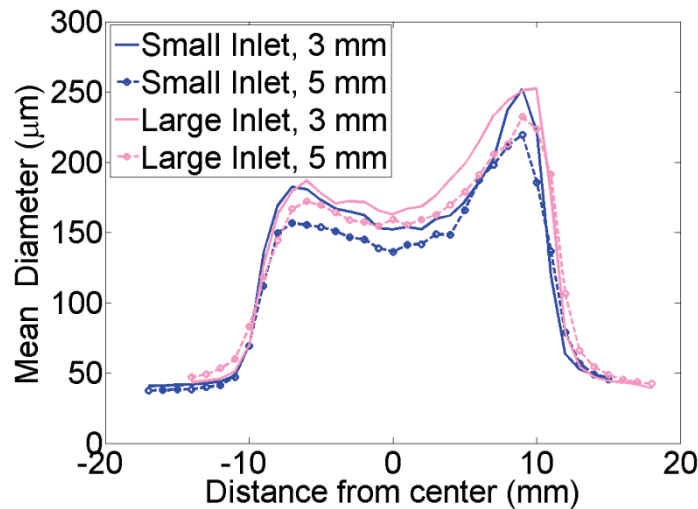

- **As long as the swirl number remains nearly constant, the inlet size and number should not effect the spray**
 - The initial shelter should allow the film to fully develop and have no “memory” of the inlet
- **A slight increase in mean droplet diameter is observed for geometries with larger liquid inlets**
 - Difference is small, and the uncertainty in the results is not fully understood, so it is not clear if it is significant
 - Swirl is very slightly different between the two which may add to the difference
- **General droplet distributions are very similar suggesting similar atomization behavior**



Swirl



- Shadowgraphy shows sprays with lower swirl number have larger droplets on the periphery
- Mean droplet diameter is increased at lower swirl number (in most locations) and symmetry is greatly improved
- The droplet distribution also changes suggesting a difference in atomization quality and behavior

